


Benefits of a Home with the ProSeries Anti-Scale Water Filtration System

Dissolved minerals in hard water which enter your home form a scale which makes water heaters and other water-using appliances work harder than necessary. A ProSeries Anti-Scale Water Filtration System conditions the water as soon as it enters your home and delivers treated water throughout the entire house.




EarthSafe
TECHNOLOGY

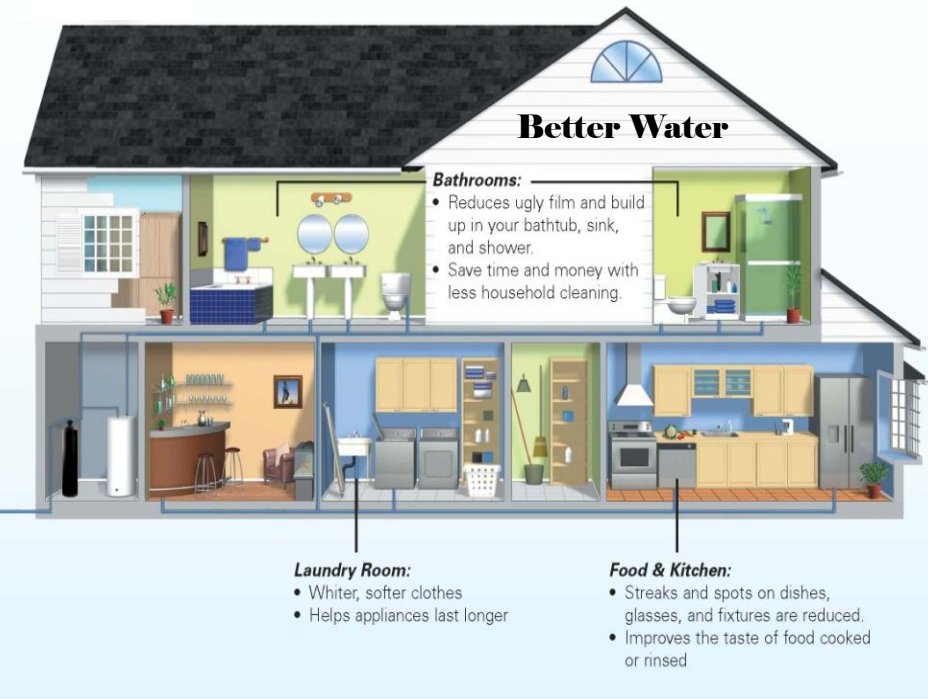

For more information or to schedule your free in-home consultation please contact Better Water LLC (615) 355-6063 opt 3

The ProSeries Anti-Scale Water Filtration System provides protection from scale formation throughout the home. The ProSeries Anti-Scale Water Filtration System can be installed at the point of entry to treat your entire home, both hot and cold water, or it can be located directly before a water heater or other device (e.g. sauna, etc) that requires protection from hard water.

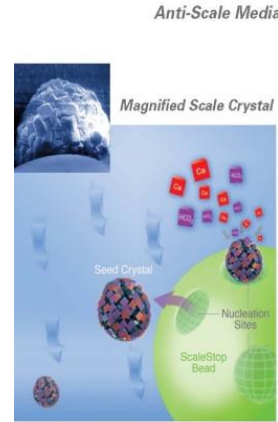

Inside the ProSeries Anti-Scale Water Filtration System are thousands of tiny Anti-Scale beads. Atomic level templates on the surface of the beads act as catalysts causing the calcium, and bicarbonate ions in hard water to form microscopic crystals.



Once the crystals grow to a certain size they are released from the bead. The crystals in solution keep the hardness out of the water so that it can't deposit and form scale on the plumbing surfaces or interfere with soaps and detergents.



How does the ProSeries Anti-Scale Water Filtration System work?

Proprietary media causes calcium, magnesium, and bicarbonate ions to form microscopic hardness crystals, which stay suspended throughout the water supply, eventually being flushed harmlessly down the drain. No chemicals, such as salt or phosphate are used with the ProSeries Whole House Multi Media Filtration System.

The ProSeries Anti-Scale Water Filtration System reduces the ability of water molecules to prevent calcium, magnesium and bicarbonate ions from coming together to form crystals of calcium and magnesium scale. This process, that we refer to as Template Assisted Crystallization (TAC), results in the creation of microscopic crystals of scale (seed crystals), which rapidly form in the treated water, not on the contact surfaces of the water system, and are carried downstream in colloidal suspension through the water system.



Better Water LLC

698 Swan Drive Smyrna, TN 37167

CALL TODAY!

(615) 355-6063 opt 3

Environmentally Friendly



Chemical free media prevents scale formation and is an environmentally friendly option to water treatment. Safe for landscaping and lawn watering.

No Monthly Maintenance



Virtually Maintenance Free! No bags of salt or other chemicals to buy, transport and store.

No Slippery Feel



Your water will be smooth and gentle “sodium free”. No more slippery “can’t get the soap off” feeling. Beneficial minerals retained for more healthful drinking water.

Third Party Tested & Certified



Tested by an independent laboratory against the international protocol for scale prevention, the original product achieved 99.6% effectiveness rating – the only technology to do so and far more effective than any other scale prevention technology.

No Waste Water or Electricity



This elite system does not require electricity or backwashing. Save money and water with zero electricity usage and no waste water. Improves the efficiency of water using appliances. Simple installation – no electrical or drain hookup.

How does the ProSeries Anti-Scale Water Filtration System Go Green with water?

The ProSeries Anti-Scale Water Filtration System offers you an all natural method of water filtration that will help to condition your water, without a negative impact on our environment.

Using a revolutionary process, the ProSeries eliminates the nasty effects of hard water, without the harsh impact on the environment. The ProSeries wastes no water and does not discharge harmful salt brine into our limited fresh water supply.

Have you ever thought about softening your water but, didn't like the idea of a salt system?

Did you know that you can enjoy the benefits of softened water without removing the hardness from your water? Our **ProSeries Anti-Scale Water Filtration System** is the natural way to eliminate the nasty effects of hard water.

The **ProSeries Anti-Scale Water Filtration System** improves the efficiency of your water heater and water using appliances and helps them last longer! Clothes are softer and bright! Soaps and shampoos lather more and clean better. Save time & money with less household cleaning.



Sinks and fixtures – Cleaner and shiny!
Soaps lather more than with untreated water.



Dishwasher – Greatly reduces spots and streaks on dishes and glassware! Immediately reduce the amount of detergent used by approximately 50%.



Shower doors & tiles – Greatly reduces ugly soap scum and film build up in bathtub, sink, and shower.

For more information or to schedule your free in-home consultation please contact Better Water LLC (615) 355-6063 option 3

For more information or to schedule your free in-home consultation please contact Better Water LLC (615) 355-6063 option 3